

INSTALLATION INSTRUCTIONS


Troldtekt® acoustic panels and Troldtekt® Plus installed in concealed T35 profiles in removable, suspended ceiling system

These instructions apply to installation of Troldtekt® acoustic panels and Troldtekt® Plus in concealed T35 profiles in removable, concealed ceiling system. Download installation instructions for Troldtekt® T35 profile system from www.troldtekt.com.


PROFILE DRAWINGS

K5-FN

Rebate and groove on long edge, 5 mm bevel

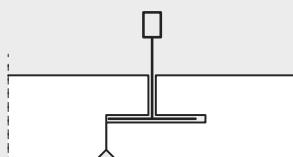

Troldtekt acoustic panel

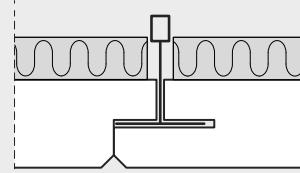

Troldtekt Plus


INSTALLATION

Check that all hangers are secure after installation of the profile system. Adjust if necessary. Then place the Troldtekt panels with the keyway facing the installation direction so that the last row of panels lies loosely in the profile facing the wall.


As you place the panels, fit spacer profiles for every max. 1350 mm. The first spacer profile should be fitted max. 300 mm from the wall. Install the spacer profiles on the suspended main profiles.

NOTE: The illustration below shows the installation of Troldtekt acoustic panels in stretcher bond. You can find other installation principles in the installation instructions for the suspended, concealed T35 profile system. Contact Troldtekt for technical advice if installing acoustic panels in module 600x600 mm.

ILLUSTRATION – INSTALLATION

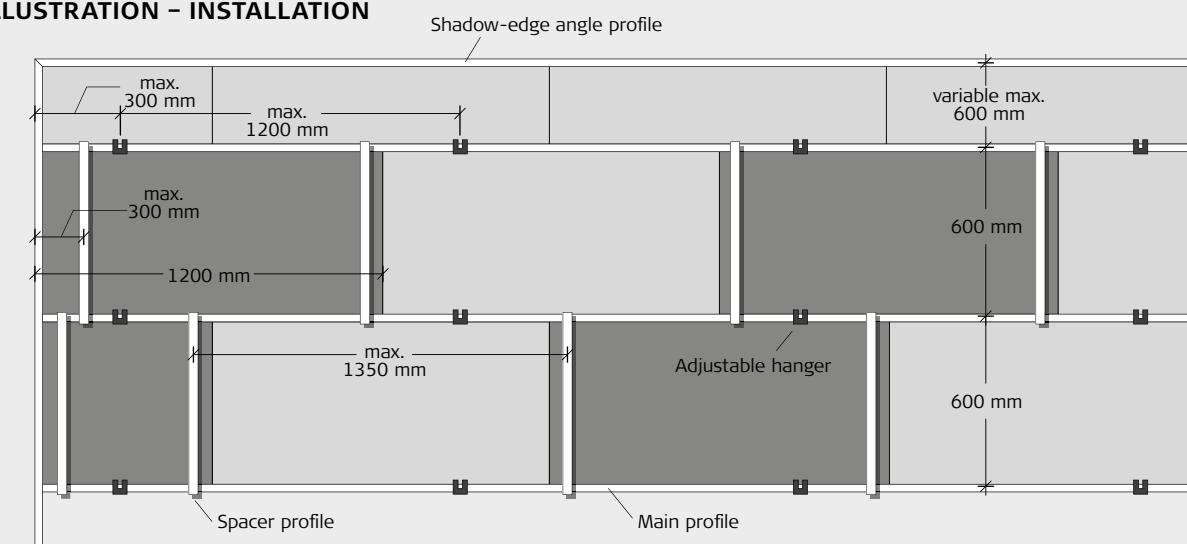

SYMBOLS



Non-removable panel



Removable panel