


VAPOUR CHECK


If you need to install a vapour check, we recommend using polyethylene. The vapour check must be placed over the wooden battens, i.e. between the battens and the main beam. Install the vapour check tightly against the insulation.

Please refer to the manufacturer's instructions.

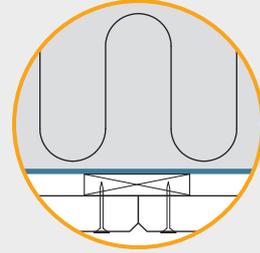

TROLDTEKT® KN BRACKETS AND SCREWS

Panel thickness (mm)	Panel length (mm)	No. of KN brackets per panel	No. of screws along walls
35 / 35+18 / 35+40	600	1	2
	1200	2	3
	2400	3	5

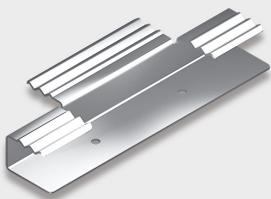

Troldekt KN bracket



Troldekt structure screw
for wood and steel, PH2



Troldekt structure screw
for steel, PH2